


# JAMES SAID


111315 FLOOR LAMP DORRELL

ASSEMBLY INSTRUCTION


1

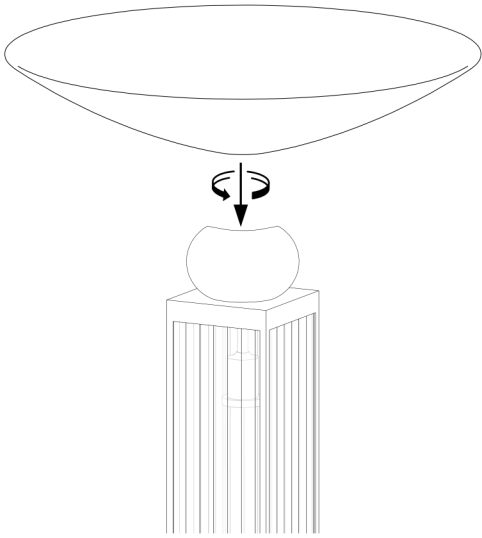


2

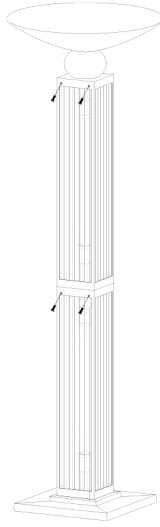


ZOOM

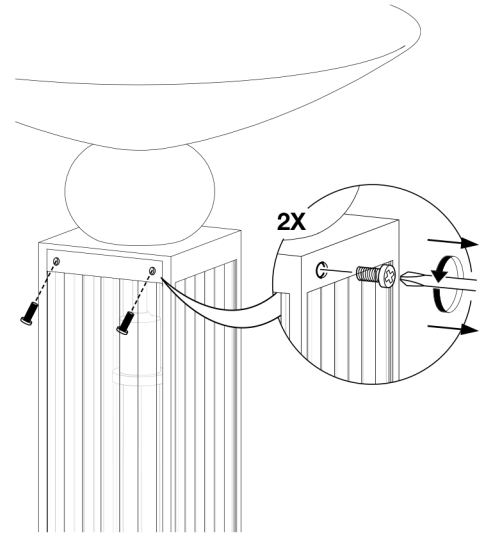


3

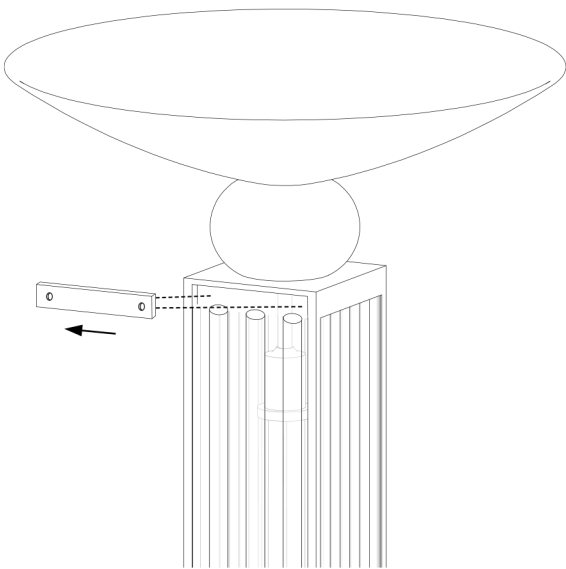

4

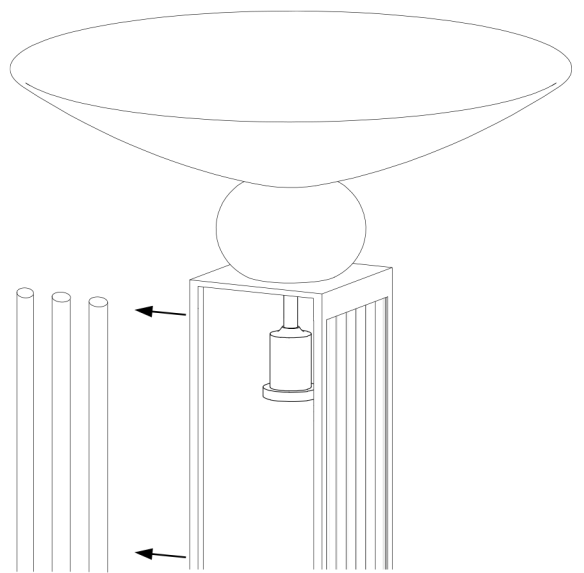

5

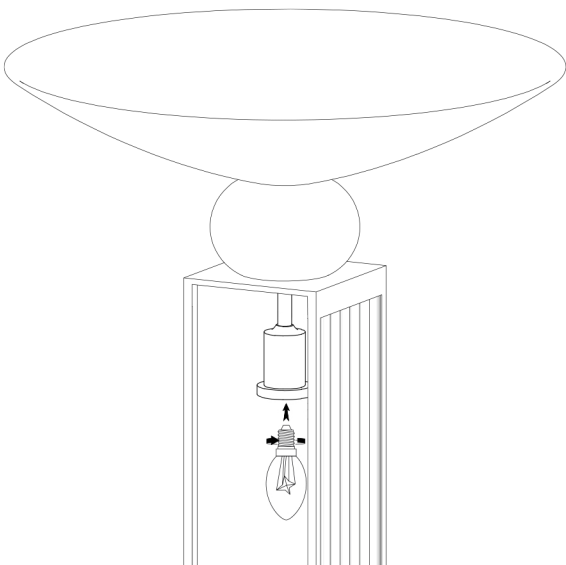

FINAL

